Polypipe

Underfloor Heating



UFHSSTATW

Smart Digital Thermostat RF - Mains Powered

Installation and Operation Guide

Table of contents

Installation Instructions

- Factory Default Settings 3
- Specifications 4
- LCD Display 5
- Buttons 6
- Wiring 7
- Mounting & Installation 8

Operating Instructions

- On / Off Function 12
- Adjusting the Target Temperature 12
- Locking the Keypad 13
- Menu 13
- P01 Connecting a UFHSSTATW 14

P02 Operating Mode 15

Nor (Normal Mode) 16

Delay Start Control (On/Off) 17

Time Proportional Integral Mode (TPI) 19

P03 Setting High and Low Limits 22

P04 Hysteresis 23

P05 Calibrate 24

P07 Setback Mode 25

P08 AFS - Air / Floor Sensor 26

P09 FHL - Floor High Limit 28

P10 Backlight 29

P11 PIN Lock 30

P12 Resetting the Thermostat 33



Smart Digital Thermostat RF
Mains Powered

Installation Instructions


Factory Default Settings

Temperature indicator:	˚C
Keypad lock:	Off
Backlight:	Auto
Operating mode:	Normal
High and low Limits:	OFF
Hysteresis:	0.4˚C
Setback temperature:	0˚C
AFS - Air / Floor / Sensor:	01 Internal Air Sensor
FHL - Floor High Limit:	26˚C


Specifications

Power supply / Input:	230Vac
Power consumption:	<1W
Temperature range:	5...35˚C
Ambient temperature:	0...45˚C
Ambient admissible humidity:	5-95% RH
Dimensions:	91 x 91 x 40mm
Internal temperature sensor:	NTC 100K
Backlight:	White
IP rating:	IP20
Pollution degree:	2
Hysteresis (Switching differential):	Adjustable from 0 to 1°C 0.1°C increments
Automatic action:	1C
Setback temperature:	Adjustable 0 to 10˚C


LCD Display

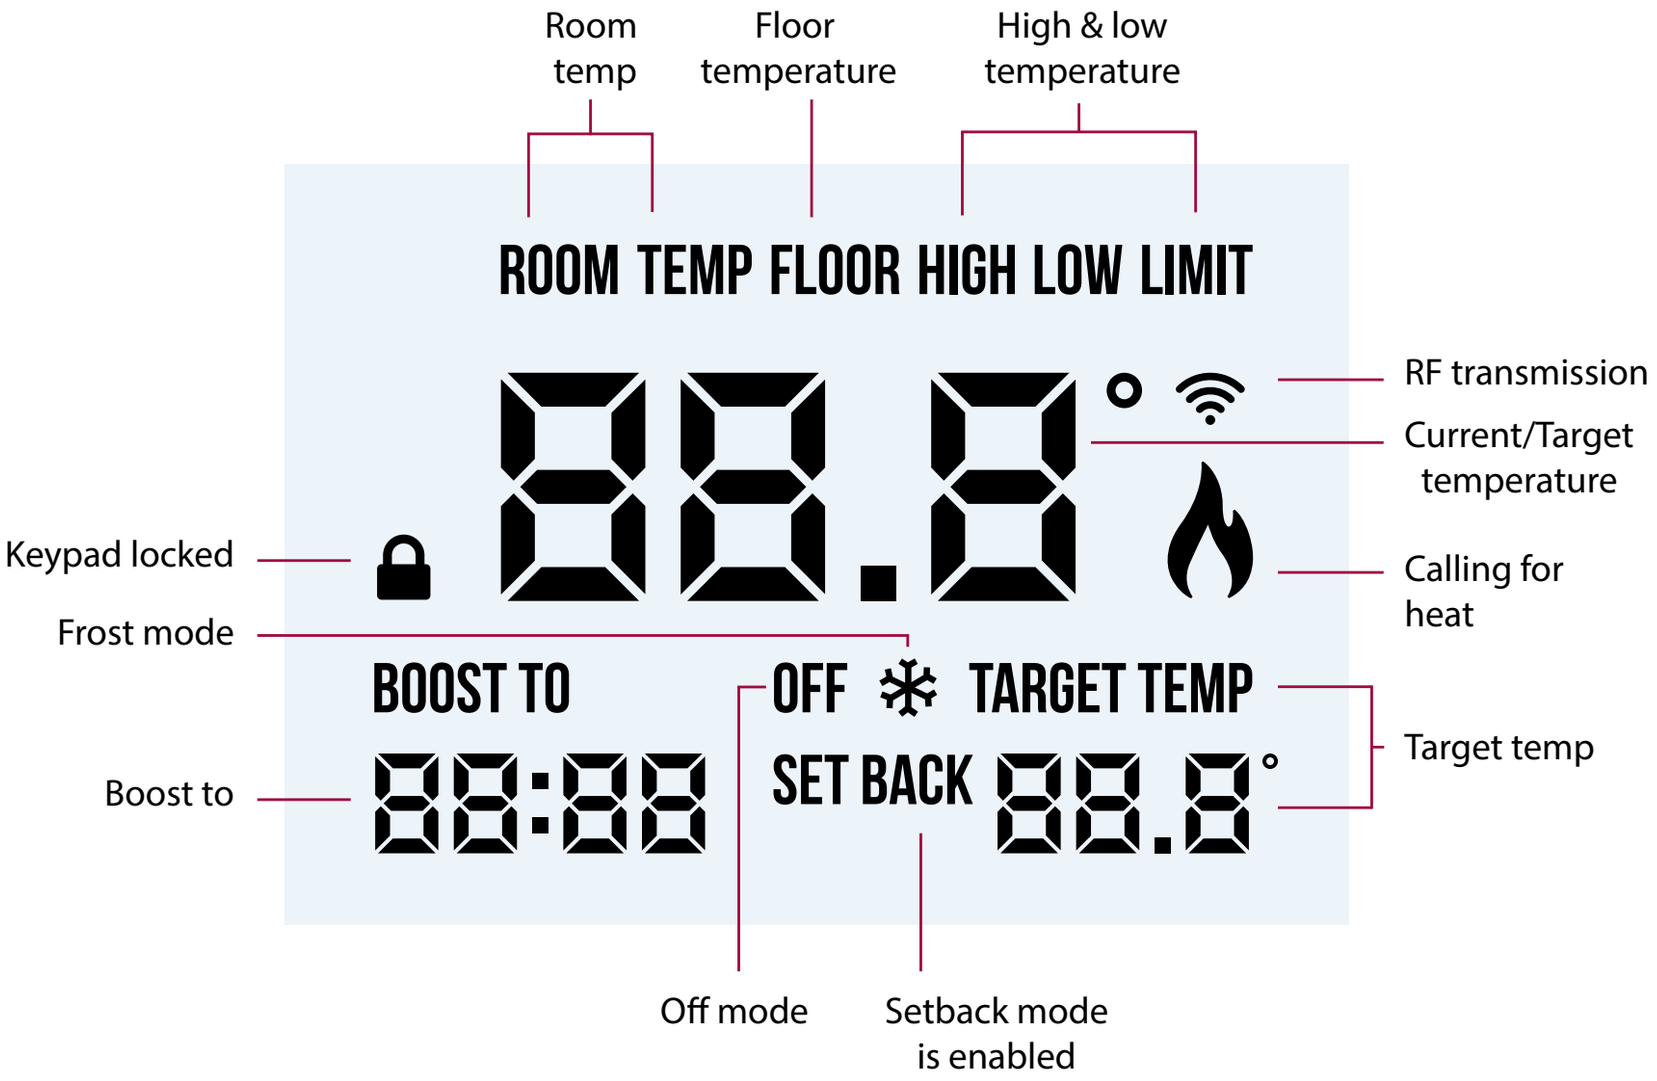
Room temp
Floor temperature
High & low temperature
ROOM TEMP FLOOR HIGH LOW LIMIT
88.8°
RF transmission
Current/Target temperature
Keypad locked
Calling for heat
Frost mode
BOOST TO
OFF
TARGET TEMP
Target temp
Boost to
88:88
SET BACK
88.8°
Off mode
Setback mode is enabled

Buttons

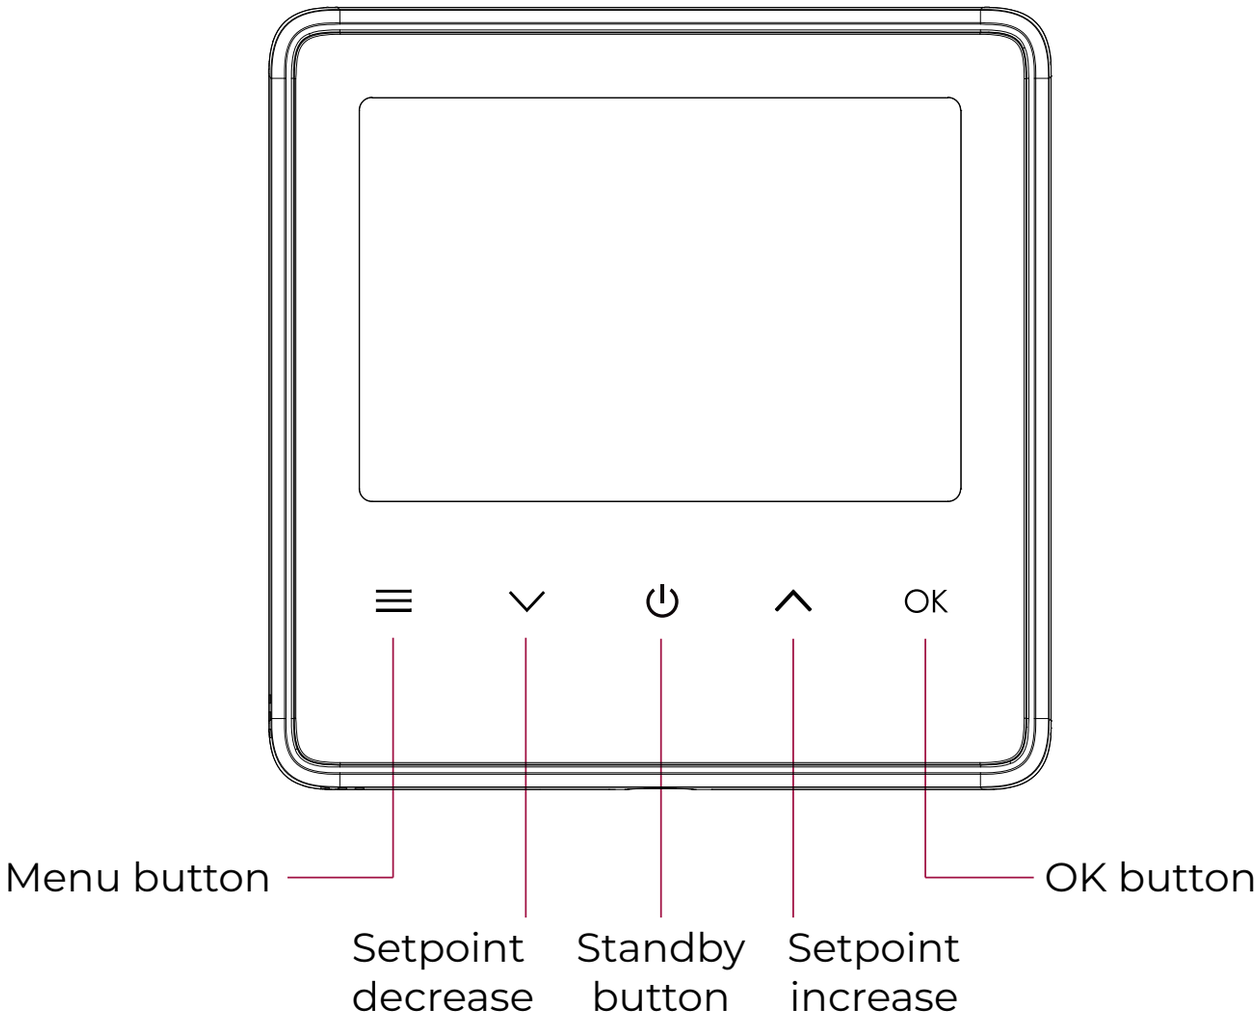
OK
Menu button
Setpoint decrease
Standby button
Setpoint increase
OK button

Wiring

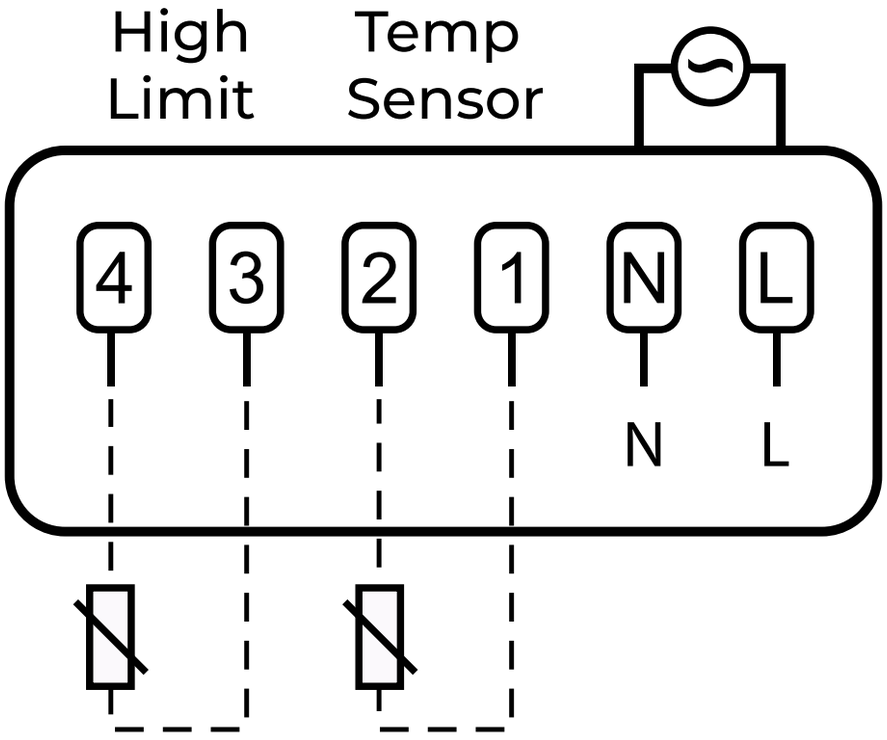

Terminal Connections

L	Live In
N	Neutral In
1 & 2	External Temp Sensor
3 & 4	External High Limit Sensor

Note: UFHFSW temperature sensor and UFHFSBW Housing can be bought separately as an accessory.

Mounting & Installation

Caution!

The power supply for all mains powered thermostats needs to be isolated from the same fused spur as the UFH10ZRFW Wiring Centre and the heat source (boiler) as per the wiring details to ensure safety during installation / maintenance.

- Installation and connection should only be carried out by a qualified person.
- Only qualified electricians or authorised service staff are permitted to open the thermostat.
- If the thermostat is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the thermostat, it is necessary to complete all required settings described in this section.
- Before commencing installation, the thermostat must be first disconnected from the mains.

This thermostat can be mounted to a 1 gang recessed back box.

1) Remove the thermostat from its packaging.

2) Choose a mounting location so that the thermostat can measure the room temperature as accurately as possible.
   - Mount the thermostat 1.5 meters above the floor level.
   - Prevent direct exposure to sunlight or other heating / cooling sources.


3) Use a philips screwdriver to loosen the screw on the bottom of the thermostat and remove the front housing from the blackplate as per diagram on page 10.

4) Wire the thermostat according to the wiring diagram on page 7.

5) Screw the rear wiring box to the recessed back box.

6) Attach the front housing to the backplate and tighten the screw on the bottom of the thermostat.

1

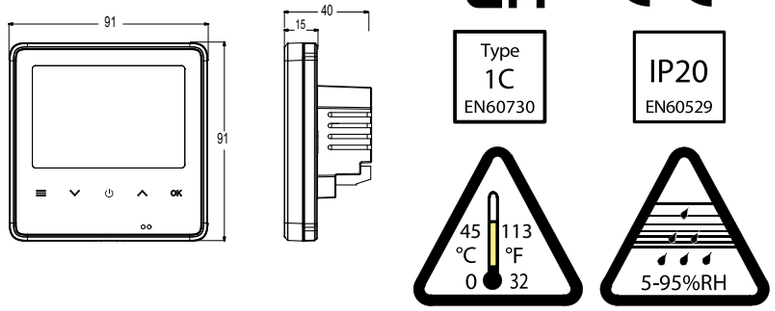


UK CA

CE


Type
1C
EN60730

IP20
EN60529


2

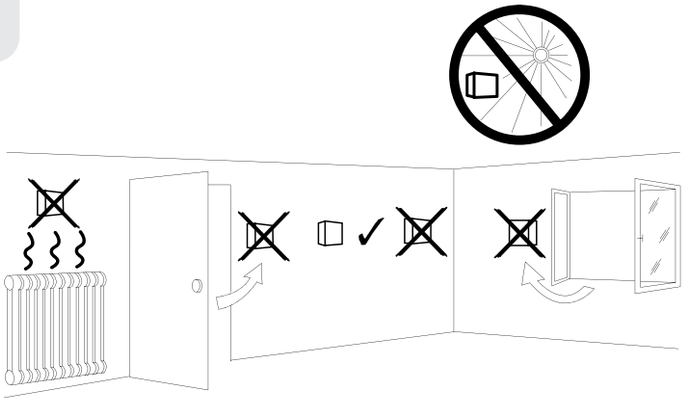


3

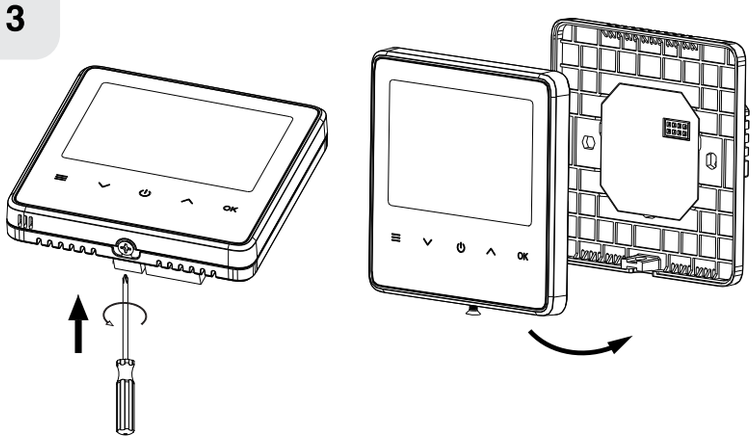


4

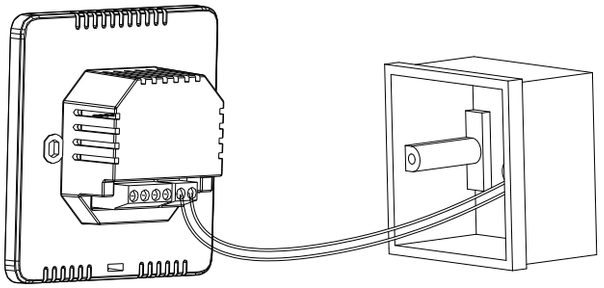

5

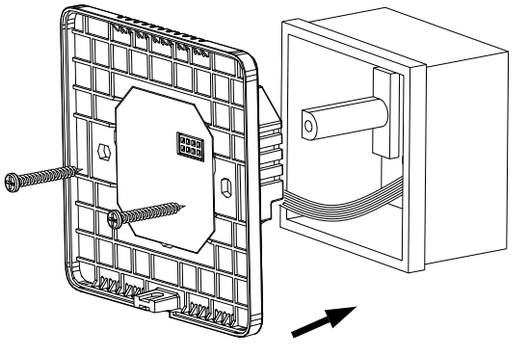

6

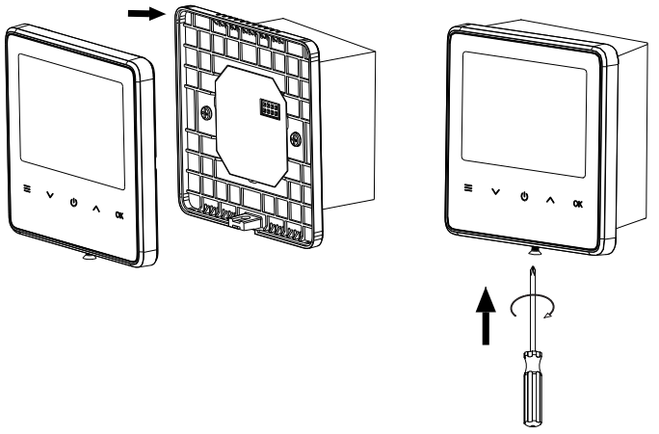



Smart Digital Thermostat RF
Mains Powered

Operating Instructions

On / Off Function

Press [⏻] to turn the thermostat On or Off. When OFF is displayed on the screen the thermostat and zone will be set to OFF.

Note: If the zone is in the constant OFF mode and the ON/ OFF button is pressed, this will change the mode of the zone to constant ON.

Adjusting the Target Temperature

Press [^] to increase the target temperature from 5-35˚C.

Press [OK] or wait 5 seconds. The target temperature is now saved.

Press [v] to decrease the target temperature from 5-35˚C.

Press [OK] or wait 5 seconds. The target temperature is now saved.

Locking the Keypad

To lock the thermostat, press and hold  and  for 10 seconds.

🔒 will appear on the screen. The buttons are now disabled.

To unlock the thermostat, press and hold  and  for 10 seconds.

🔒 will disappear from the screen. The buttons are now enabled.

Menu

This menu allows the user to adjust additional functions.

Press and hold  for 5 seconds to access the menu.

P01 Connecting a UFHSSTATW to a UFH10ZRFW

This function allows the user to connect a UFHSSTATW to a UFH10ZRFW.

To connect a UFHSSTATW to a UFH10ZRFW

1. On the UFH10ZRFW:

Press MENU, **'P01 rF COn'** will appear on the screen.

Press , **'RF CONNECT'** will appear solid on the screen.

Rotate to choose the zone you would like to connect to.

Press to confirm. The zone will stop flashing and appear solid.

2. On the UFHSSTATW:

Press and hold for 5 seconds.

'P01 & rF' will appear on the screen.

Press OK to select.

Wait for **'r01'** to appear solid.

Press OK to confirm the thermostat is connected.

3. On the UFH10ZRFW:

Rotate to choose another zone you would like to connect to or press MENU twice to return to normal operation.

Note: When pairing additional zones to a UFH10ZRF, **'r02'**, **'r03'**, **'r04'** ...**'r10'** can appear on the thermostat screen.

P02 Operating Mode (Normal  / Delay Start / TPI)

There are three settings for selection, Normal, Delay Start or TPI mode. The default setting is Normal.

Press and hold ☰ for 5 seconds.

'**P01 & rF**' will appear on the screen.

Press ^ until '**P02 & nOr**' appears on the screen.

Press OK to select.

Use v and ^ to select between:

nOr (Normal mode)

dS (Delay Start mode)

tPi (Time Proportional Integral mode)

Press OK to confirm the mode.

Press ⏻ to return to normal operation.


P02 Operating Mode continued

Nor (Normal Mode)

When the temperature falls below the target temperature, 🔥 will appear and the thermostat will activate the demand for heat.

When the temperature rises above the target temperature, 🔥 will disappear, and the thermostat will cancel the demand for heat.

Graph (16.1): On / Off Control

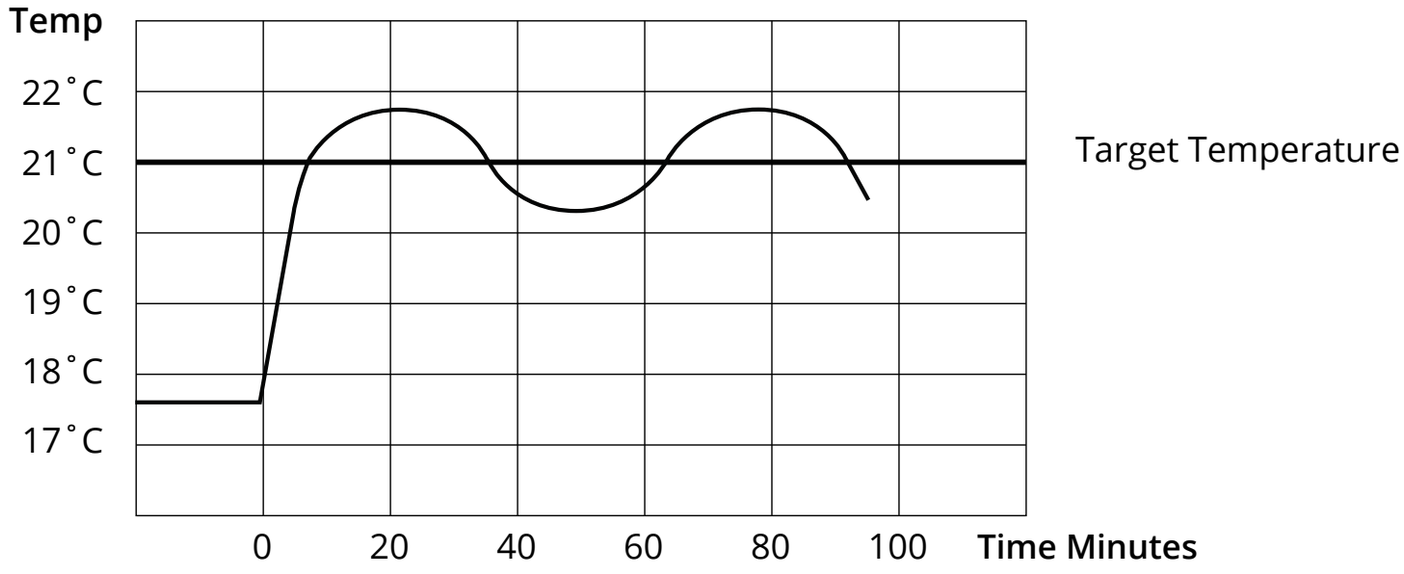


Delay Start Control (On/Off)

When in this mode the thermostat is delayed by a variable time depending on the current temperature, target temperature and also the fall in temperature from when the delay start has activated.

The 🔥 will flash until the thermostat activates.

When activated the thermostat will allow the heating system time to reach the target and delay start will remain inactive until it reaches this target.

Graph (17.1): Delay Start Control

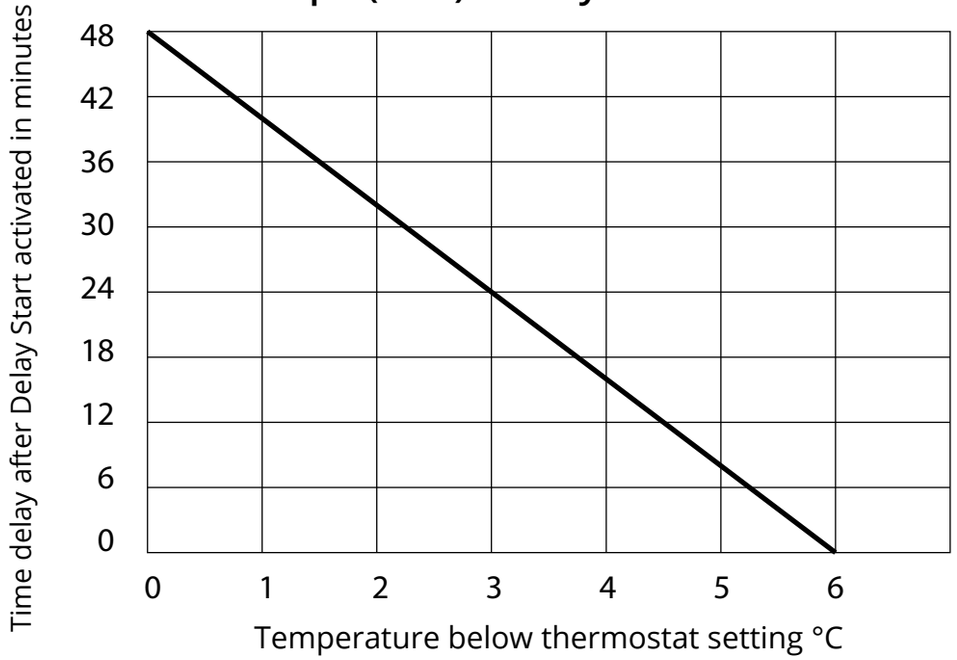

E.g: If the temperature is 6˚C below the thermostat target, the thermostat will call for heat immediately.

If the temperature is 2˚C below the target, the thermostat will not call for heat for 32 minutes.

P02 Operating Mode continued

Delay start can be reactivated by:

1. Press [∨] to lower the target below the current temperature.
2. Press [OK] to confirm.
3. Press [∧] to increase the target temperature above the zone temperature within 6°C .
4. Press [OK] to confirm.

The heating will be delayed as per the graph on page 18.

If the difference between the actual temperature and the target is 1°C the thermostat will delay starting for circa 40 minutes.

If the difference between the actual temperature and the target is 3°C the thermostat will delay starting for circa 24 minutes.

If the difference is 6°C or more then the thermostat will be switched on immediately.

The time delay will change if the temperature drops from the original calculation.

Time Proportional Integral Mode (TPI)

When the thermostat is in TPI mode and the temperature is rising in the zone and falls into the Proportional Bandwidth section, TPI will start to affect the thermostats operation. The thermostat will turn on and off as it gains heat so that it doesn't overshoot the target by too much. It will also turn on if the temperature is falling so it doesn't undershoot the target which will leave the user with a more comfortable level of heat.

There are 2 settings that will affect the thermostats operation.

1. The number of heating cycles per hour.
2. The Proportional Bandwidth.


CyC – Number of Heating Cycles per hour  **6 Cycles**

This value will decide how often the thermostat will cycle the heating on and off when trying to achieve the target temperature. You can select 2, 3, 6 or 12.

Pb - Proportional Bandwidth 2°C

This value refers to the temperature below the target at which the thermostat will start to operate in TPI control. You can set this temperature from 1.5°C to 3.0°C in 0.1°C increments.

Graph (20.1): TPI Control

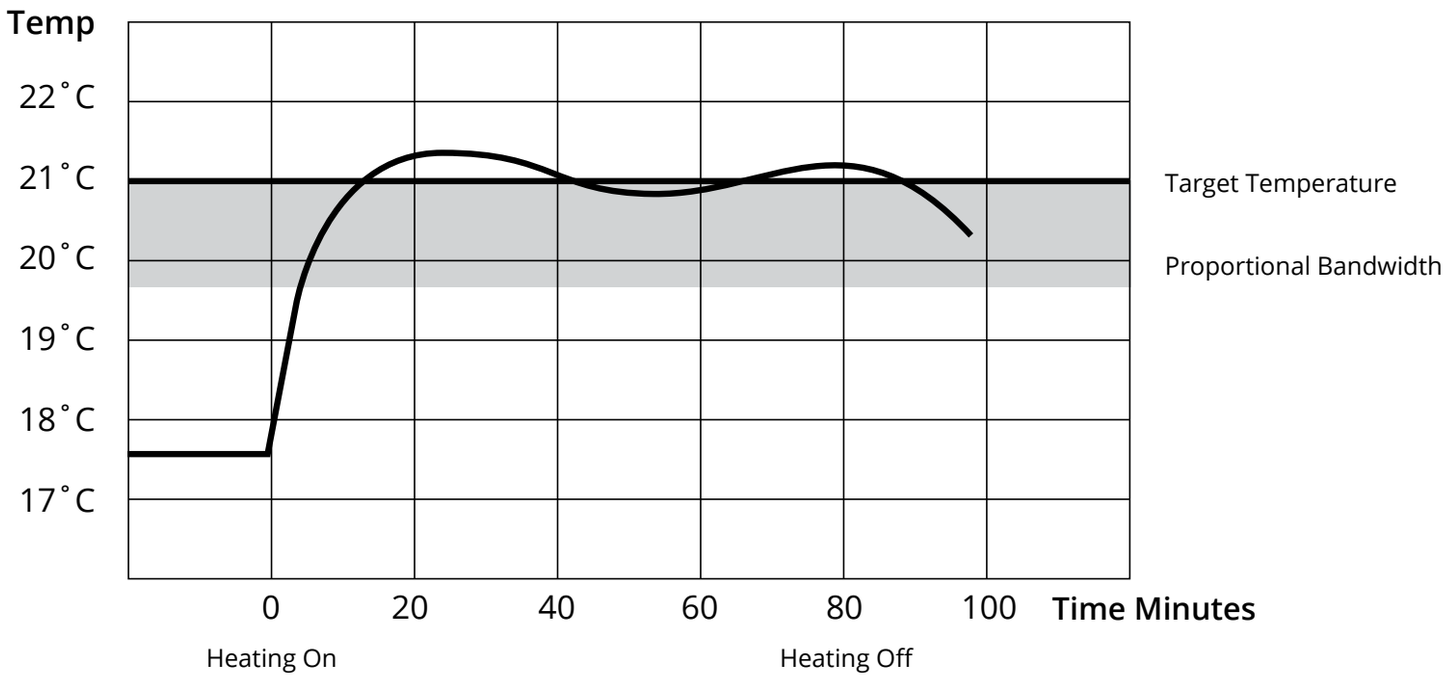

Time Proportional Integral Mode (TPI)

Once TPI mode is selected, '**CYC**' and '**06**' will appear on the screen.
Use  and  to select from 2, 3, 6 or 12.
Press  to confirm.

'**P Band**' and '**2.0**' will appear on the screen.
Use  and  to select from 1.5 to 3.0.
Press  to confirm.
Press  to return to normal operation.

P03 Setting High & Low Limits OFF

This menu allows the installer to change the minimum & maximum temperatures that the thermostat can be set to between 5...35°C.

Press and hold ☰ for 5 seconds.

'**P01 & rF**' will appear on the screen.

Press ∧ until '**P03 & HI LO**' appears on the screen.

Press OK to select.

Use ∨ and ∧ to select '**ON**'.

Press OK to select.

'**HIGH LIMIT**' will appear on the screen, the temperature will begin to flash.

Use ∨ and ∧ to select the high limit for the thermostat.

Press OK to confirm.

'**LOW LIMIT**' will appear on the screen, the temperature will begin to flash.

Use ∨ and ∧ to select the low limit for the thermostat.

Press OK to confirm.

Press ⏻ to return to normal operation.

'**LIMIT**' will appear on the screen.

P04 Hysteresis HOn 0.4°C HOFF 0°C

This menu allows the installer to change the switching differential of the thermostat when the temperature is rising and falling.

If '**HOn**' is set at 0.4˚C and the setpoint is 20˚C, then the thermostat will switch on when the temperature drops below 19.6˚C.

If '**HOFF**' is set at 0.2˚C and the setpoint is 20˚C, then the thermostat will switch off when the temperature reaches 20.2˚C.

Press and hold ☰ for 5 seconds.

'**P01 & rF**' will appear on the screen.

Press ∧ until '**P04 & HOn**' appears on the screen.

Press OK and the '**HOn**' temperature will begin to flash.

Use ∨ and ∧ to select the '**HOn**' temperature.

Press OK and the '**HOFF**' temperature will begin to flash.

Use ∨ and ∧ to select the '**HOFF**' temperature.

Press OK to confirm.

Press ⏻ to return to normal operation.

P05 Calibrate

This menu allows the installer to calibrate the temperature of the thermostat.

Press and hold ☰ for 5 seconds.

'**P01 & rF**' will appear on the screen.

Press ^ until '**P05 & CAL**' appears on the screen.

Press OK to select.

'**CAL**' and the actual temperature will appear on the screen.

Press ˅ and ^ to calibrate the temperature.

Press OK to confirm.

Press ⏻ to return to normal operation.

P07 Setback Mode (0°C / Off)

In Setback mode, the thermostat reduces the temperature setpoint by 0°...10°C which is predetermined by the user. The factory default setting is set to (0°C / OFF) and needs to be activated to function. Setback mode will only work when the zone is timed off. This can only happen when the zone is in the AUTO OFF or ALL DAY OFF mode.

Press and hold ☰ for 5 seconds.

'P01 & rF' will appear on the screen.

Press ^ until **'P07 & Sb'** appears on the screen.

Press OK to select. **'OFF'** will appear on the screen.

Use ^ and v to select **'On'.** Press OK to confirm.

The setback temperature will begin flashing on the screen.

Use ^ and v to select setback temperature between 0°...10°C.

Press OK to confirm.

Press ⏻ to return to normal operation.

The setback temperature will be saved and the user will be returned to the previous screen.

When in Setback mode **'SET BACK'** will appear on the screen.

P08 AFS - Air / Floor Sensor  (01 Internal air sensor)

This function allows the user to select between 5 different temperature sensor options.

01 Internal air sensor

This option allows the user to record the room temperature using the internal sensor. This is the default option.

02 External air sensor

This option allows the user to record the temperature of an adjacent room. **(UFHFSW temperature sensor required).**

03 Floor sensor

This option allows the user to record the temperature of the floor using the external sensor only. This will prevent the floor from overheating. **(UFHFSW temperature sensor required).**

04 Internal air sensor with an external hight limit sensor

This option allows the user to record the room temperature with the internal sensor while having the external sensor record the floor temperature to prevent overheating. **(UFHFSW temperature sensor required).**

05 External air sensor with an external hight limit sensor

This option allows the user to record the room temperature with external sensor 1 while having external sensor 2 record the floor temperature to prevent overheating. **(UFHFSW temperature sensors required).**

Press and hold ☰ for 5 seconds.

'P01 & rF' will appear on the screen.

Press ^ until **'P08 & AFS'** appears on the screen.

Press OK to select.

'01' will flash on the screen.

Use ^ and v to choose between options 01, 02, 03, 04 or 05.

Press OK to confirm.

Press ⏻ to return to normal operation.

Note: UFHFSW temperature sensor and UFHFSBW Housing can be bought separately as an accessory.

P09 FHL - Floor High Limit  26.0°C

This function allows the user to select the high limit temperature of the external sensor. Selectable temperature range 5°C – 45°C.

Temperature Sensor 04 or 05 must be selected,

See Page 26 & 27 P08 AFS.

Press and hold ☰ for 5 seconds.

'P01 & rF' will appear on the screen.

Press ^ until **'P09 & FHL'** appears on the screen.

Press OK to select.

The high limit temperature will flash on the screen.

Use ^ and v to choose the desired high limit temperature.

Press OK to confirm.

Press ⏻ to return to normal operation.

P10 Backlight AUTO

There are three settings for selection.

‘AUt’ The backlight is on for 10 seconds when any button is pressed.

‘On’ The backlight is permanently on.

‘OFF’ The backlight is permanently off.

Press and hold ☰ for 5 seconds.

‘P01 & rF’ will appear on the screen.

Press ^ until **‘P10 & BL’** appears on the screen.

Press OK to select.

‘AUt’ will appear on the screen.

Use ^ and v to change the mode between AUTO, ON and OFF.

Press OK to confirm selection and to return to normal operation.

P11 PIN Lock  OFF

This function allows the user to put a PIN lock on the thermostat.

Set Up the PIN

Press and hold ☰ for 5 seconds.

'P01 & rF' will appear on the screen.

Press ^ until **'P11 & PIn'** appears on the screen.

Press OK to select.

'Off' will appear on the screen

Use ^ to change to On.

'0000' will flash on the screen.

Use ^ and v to enter to set value from 0 to 9 for the first digit.

Press OK to move to the next PIN digit.

When the last digit of the PIN is set, press OK.

It is necessary to verify the PIN, **'vEr'** will appear on the screen

Re enter the PIN code again.

Press OK.

The PIN is now verified, and the PIN lock is activated.
If the verification PIN is entered incorrectly the user is brought back to the menu. When the PIN lock is active, the 🔒 will appear on the screen. When the thermostat is PIN locked, pressing any button will take the user to the PIN unlock screen.

To Unlock the PIN

Press any button, '**UnL'** appears on the screen. '**0000**' will flash on screen.

Use ^ and v to set the value from 0 to 9 for the first digit.

Press OK to move to the next PIN digit.

When the last digit of the PIN is set.

Press OK . The PIN is now unlocked.

If a PIN has been unlocked on the thermostat, it will automatically reactivate if there is no button pressed for 2 minutes.

P11 PIN Lock continued

To Deactivate the PIN

When the PIN is unlocked (see instructions on Page 31)

Access PIN in the installer menu.

Press [OK], **'ON'** will appear on the screen.

Press [∨] select **'OFF'**.

Press [OK]. **'0000'** will flash on the screen. Enter the PIN.

Press [OK].

The PIN is now disabled.

P12 Resetting the Thermostat

To reset the thermostat to factory settings.

Press and hold ☰ for 5 seconds.

‘**P01 & rF**’ will appear on the screen.

Press ^ until ‘**P12 & rSt**’ appears on the screen.

Press OK to select.

‘**NO**’ will flash on the screen.

Press ^.

‘**YES**’ will flash on the screen.

Press OK to confirm.

The thermostat will restart and revert to its factory settings.

Polypipe

Underfloor Heating

Polypipe Building Products
Broomhouse Lane
Edlington Doncaster
DN12 1ES

Want More Information?

Call our telephone support team on: 01709 772200

Or view technical specifications directly on our website: www.polypipeufh.com

©2025 Polypipe

2025-11-13_UFHSSTATW_DS_PK